


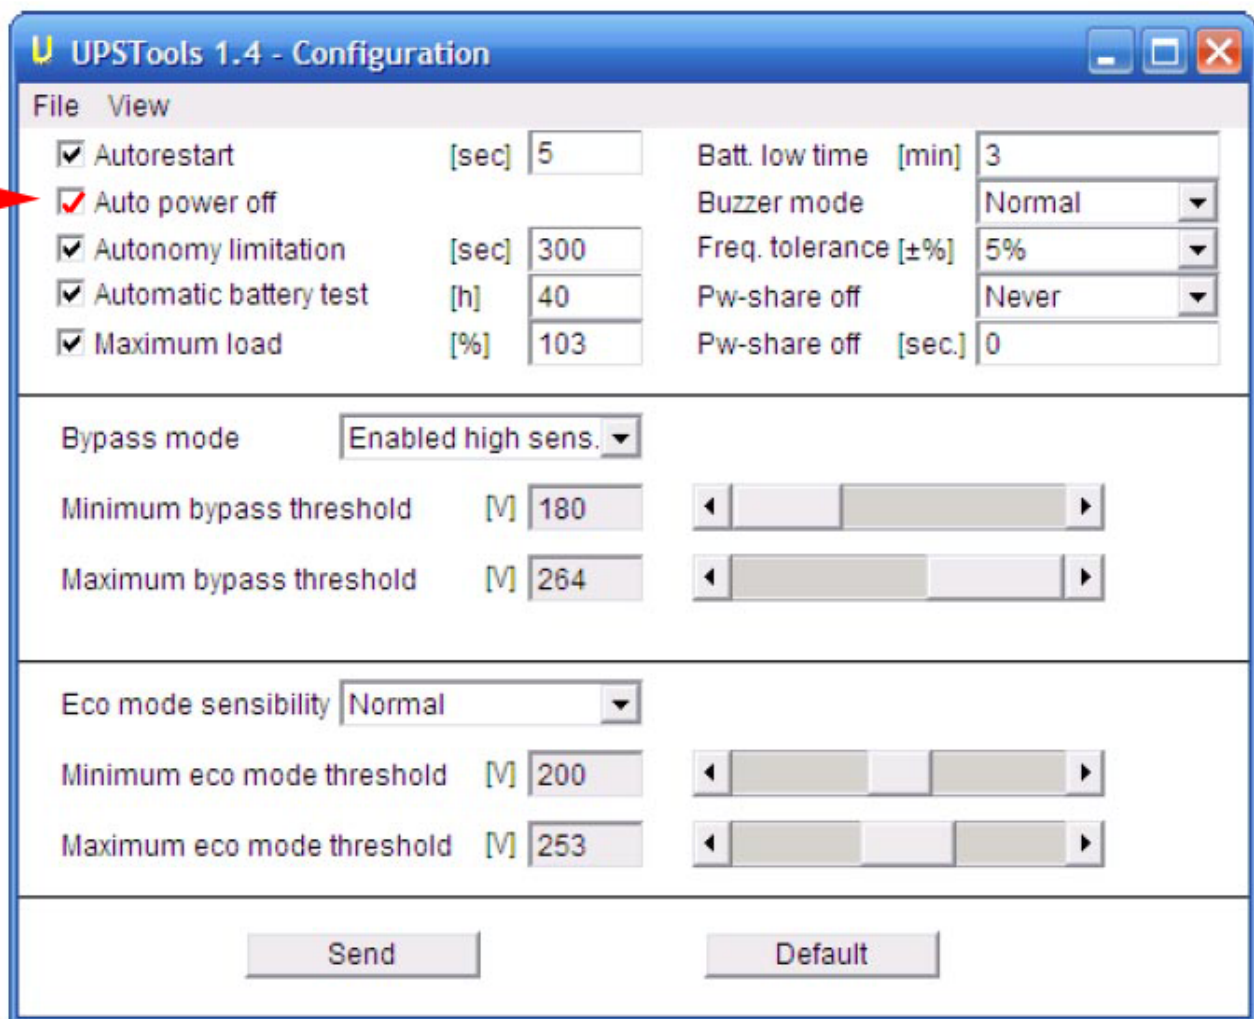

UPSTools 1.4 - Configuration

File View

☒ Autorestart	[sec]	5	Batt. low time [min]	3
☒ Auto power off			Buzzer mode	Normal
☒ Autonomy limitation	[sec]	300	Freq. tolerance [±%]	5%
☒ Automatic battery test	[h]	40	Pw-share off	Never
☒ Maximum load	[%]	103	Pw-share off [sec.]	0

Bypass mode: Enabled high sens.

Minimum bypass threshold [V]: 180

Maximum bypass threshold [V]: 264

Eco mode sensibility: Normal

Minimum eco mode threshold [V]: 200

Maximum eco mode threshold [V]: 253

Buttons: Send, Default

The "Configuration" view can be used to set some of the UPS operating parameters.

- **Autorestart:** if during operation from battery the UPS switches off automatically due to end of backup time, a remote shutdown or auto power off command, with this function enabled the UPS automatically starts up when the mains power supply is restored, while it remains in stand-by if the function is disabled. (Default→ENABLED). It is also possible to set the number of seconds of waiting between mains restore and autorestart in order to avoid sudden autorestart (Default→5 sec).
- **Auto power off:** if during operation from battery the percentage of the load powered by the UPS goes below the 5% threshold (load off or disconnected), the UPS automatically switches off after 40 seconds if the function is enabled, while it continues to operate normally from the battery if the function is disabled. (Default→DISABLED)
- **Limited backup time:** allows (if enabled) to specify a maximum time in seconds of operation from battery; once this time has passed, the UPS automatically shuts down even if the battery backup time has not finished; times from 1 to 65534 seconds can be set. (Default→DISABLED)
- **Automatic battery test:** if this function is enabled, a battery test is run automatically (Default→ENABLED) every fixed period of UPS operation. (Default→40 h)
- **Maximum load:** the user can set a percent load threshold after which the UPS signals a fault for maximum load (Default→ENABLED) (Default→103 %)
- **End of discharge prealarm time:** minimum threshold (in minutes) of residual backup time after which the UPS activates the end of discharge prealarm signal. (Default→3 MINUTES)
- **Buzzer:** used to set buzzer operation. (Default→QUIET)
Normal: sounds in all cases where required (see UPS manual);